


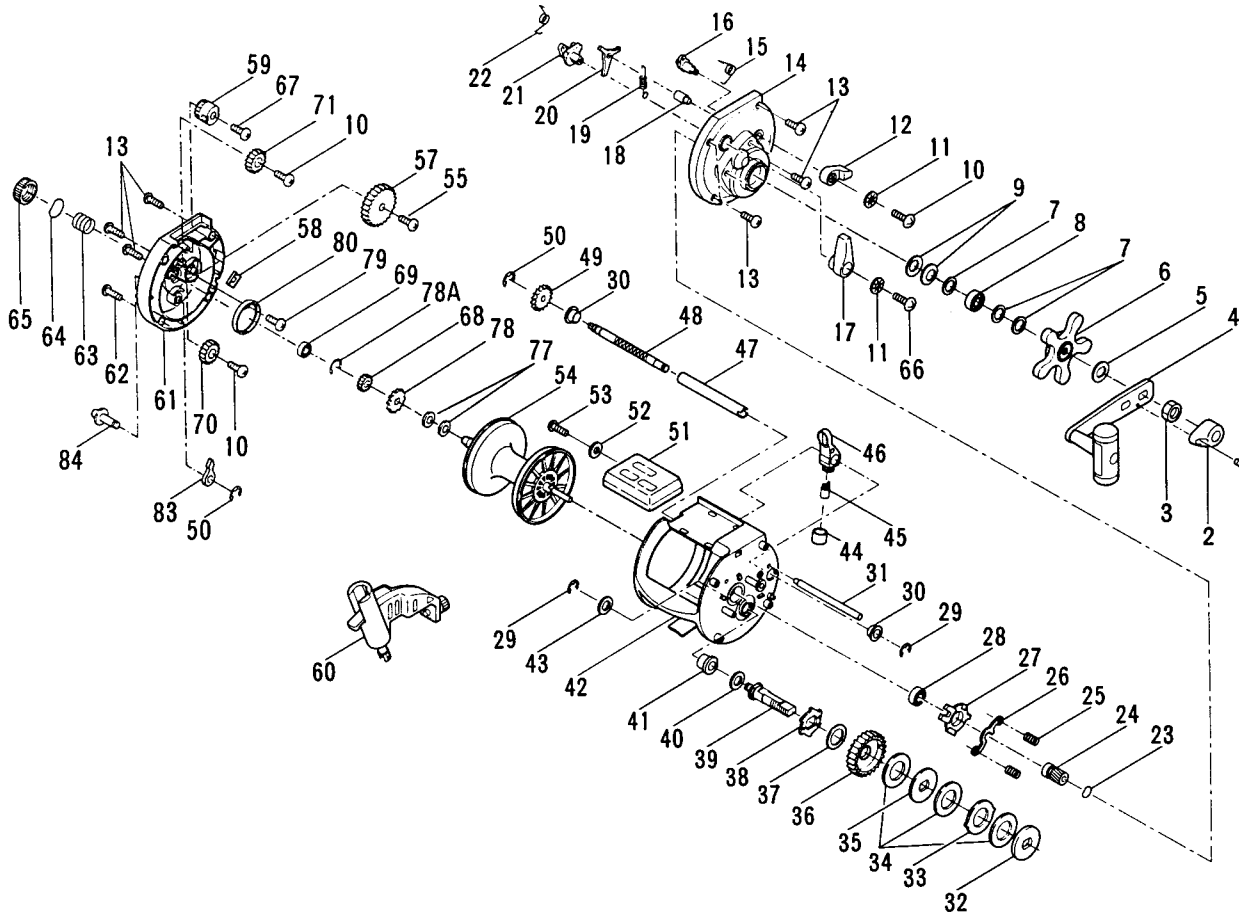

MODEL 875LC

PARTS LIST FOR MODEL 875LC



KEY NO.	PART NO.	DESCRIPTION
1	32-875	Handle Lock Screw
2	110A-875	Handle Nut Cap
3	23-875	Handle Nut
4	24-875	Handle Assembly
5	8-875	Thrust Washer
6	10-875	Drag Star Assembly
7	9-875	Star Washer (3)
8	20-722	R.S. Plate Bearing
9	8A-875	Disc Spring (2)
10	22-875	Mounting Screw (3)
11	22A-875	Eccentric Washer (2)
12	21A-875	Direct Drive Lever
13	39A-875	Mounting Screw (7)
14	1-875	R.S. Plate
15	104-875	Direct Drive Spring
16	19C-875	Direct Drive Eccentric
17	21-875	Eccentric Lever
18	158-875	Dog Pin
19	14-875	Dog Spring
20	15-875	Dog
21	19-875	Eccentric
22	22-875	Eccentric Spring
23	40-875	Thrust Washer
24	13-875	Pinion Gear
25	18-875	Clutch Spring (2)
26	12-875	Pinion Yoke
27	11-875	Eccentric Jack
28	55-875	Spool Bearing
29	98D-875	Retaining Ring (2)
30	43-875	Worm Bearing (2)
31	58-875	Line Guide Post
32	86-875	Metal Drag Washer
33	7-875	Ear Drag Washer
34	6-875	Drag Washer HT-100 (3)
35	86A-875	Metal Drag Washer
36	5-875	Main Gear
37	4-875	Fibre Washer
38	98R-875	Ratchet Assembly
39	98S-875	Gear Stud
40	98A-875	Gear Stud Washer
41	98B-875	Gear Stud Bearing
42	183-875	Frame
43	98C-875	Gear Stud Washer
44	48-875	Pawl Cover Screw
45	47-875	Pawl
46	46-875	Line Guide
47	50-875	Worm Shaft Shield
48	42-875	Worm Shaft
49	45-875	Worm Shaft Gear
50	42B-875	Retaining Ring (2)
*51	303-875	Control Box Asm. (Feet)
*51	303-875M	Control Box Asm. (Metric)
52	304-875	Flat Washer
53	305-875	Control Box Screw
54	29-875	Spool Assembly
55	39B-875	Mounting Screw
57	64-875	Idler Gear
58	96-875	Line Storage Clip
59	306-875	Control Box Gear
60	302-875	Bogey Wheel Assembly
61	27-875	L.S. Plate
62	39-875	Mounting Screw
63	41-875	L.S. Bearing Spring
64	41C-875	Thrust Washer
65	40A-875	L.S. Bearing Cap
66	63B-875	Eccentric Screw
67	63-875	Gear Mounting Screw
68	66-875	Spool Gear
69	55A-875	Spool Ball Bearing
70	64A-875	Idler Gear A
71	64B-875	Idler Gear B
77	81A-875	Click Ratchet Spacer (2)

KEY NO.	PART NO.	DESCRIPTION
78	81-875	Click Ratchet
78A	67-875	Retaining Ring
79	63A-875	Mounting Screw
80	62-875	Click Spring
83	35-875	Click Tongue
84	36-875	Click Button

*Order Control Box in "Feet" or "Metric" according to model.